



**Part Number  
Coding Booklet**

**Theta Series - TT30**

---

**Theta 30- Power Transducer with Display**

Product Code	TT30-	X	X	XX	XX	X	X	X	X	X	XX
<b>Input Signal</b>	Active Power Active P	P									
	Reactive Power Reactive Q	Q									
	Apparent Power Apparent S	S									
<b>Network</b>	1P2W		1								
	3WUB		2								
	4WUB		3								
	4WB		4								
	3WB		5								
	3WB - U12		6								
	3WB - U13		7								
	3WB - U23		8								
<b>Input Range</b>	100-500V			8F							
<b>Input Current</b>	1/5A				75						
	1/5A 400Hz				76						
<b>Power Supply</b>	60-300V AC/DC					H					
	24-60V AC/DC					F					
<b>Output</b>	1 O/P 10						1				
	2 O/P 20						2				
<b>Display Module</b>	With Display D							D			
	Without Display WD							Z			
<b>RS 485 Module</b>	With RS 485 R								R		
	Without RS-485 Z								Z		
<b>Prog.cable</b>	With PRKAB 601 PRK P									C	
	Without PRKAB 601 Z									Z	
<b>Version</b>	Standard										00

**Commonly used Ranges for Theta 30-**

TT30-P38F75F2DRZ00	Power; 4Wire Unbal; Input: 100-500V, 1/5A AC; Aux:24-60VAC DC; 2Output; Display; RS485
TT30-P38F75H2DRZ00	Power; 4Wire; Unbal; Input: 100-500V 1/5A AC; Aux: 60-300VAC DC; 2Output; Display; RS485



Email: [psk@sifamtinsley.com](mailto:psk@sifamtinsley.com) | Web: [www.sifamtinsley.com](http://www.sifamtinsley.com)

Phone: 404.736.4903 | Fax: +1 678 881 0008 x 701 | Toll Free: 800 879 6171

3105 Creekside Village Dr, Unit 801, Kennesaw GA 30144